
# **MODEL 115**



APPLICATIONS: Provides guidance, support, or adjustment in a wide range of applications from manufacturing machinery to utility vehicles to diagnostic equipment.

Linear Motion Slide 132 lbs. [60 kg.] Flat Mounted 110 lbs. [50 kg.] Side Mounted May be vertically mounted (non-load bearing)

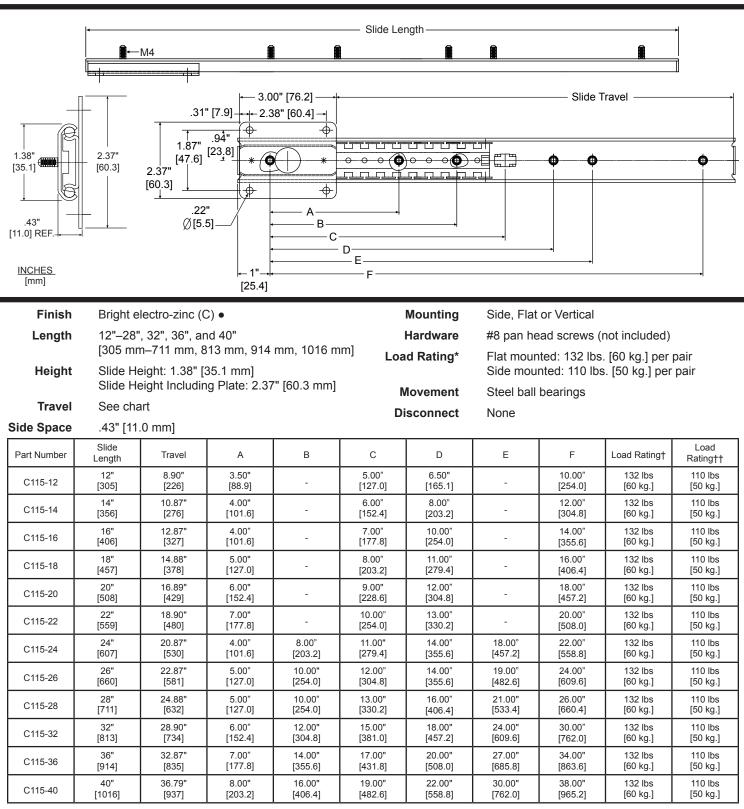

Load rating based on 10,000 cycles per pair.

**RoHS** Compliant

Flat Mount t


Side Mount ††





Request Info **H** 🕑

\*

# **Mounting Methods**

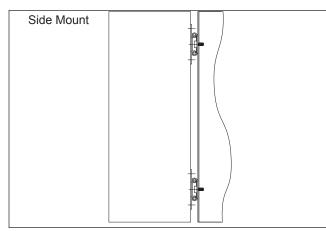

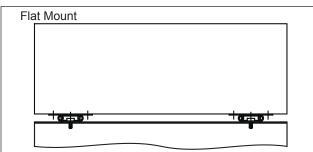

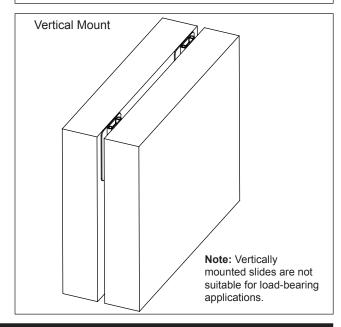

### **Installation Instructions**

- Install cabinet members into cabinet using pre-installed threaded studs (M4). Be sure slides are parallel.
  Note: M4 nuts are not included.
- 2. Install moving component (drawer, tray, etc.) to the plate bracket that is pre-affixed to the inner member using #8 mounting hardware (not included).

# **Specifications**

Slide members and ball retainers: cold rolled steel Ball bearings: Carburized steel

**RoHS Compliant** 

NOTE: Specifications, materials, prices, terms and delivery are subject to change without notice.

For the most current technical information visit www.accuride.com

## Packaging

Bulk Pack: Slides sold in box quantity, hardware is not included.

Slide lengths 12"-28" are packaged 20 each per box.

Slide lengths 32", 36" 40" are packaged 10 each per box.

### Ordering instructions

	<u>20 Pair</u> <u>C</u>	<u>115</u>	<u>-12</u>
Total Required Slides - Slide Finish ——— Slide Model ——— Slide Length ———			
ondo Longin			



#### ACCURIDE INTERNATIONAL INC.

12311 Shoemaker Avenue Santa Fe Springs, CA 90670 TEL (562) 903-0200 FAX (562) 903-0208 www.accuride.com Manufacturing, Engineering, and Sales

United States • Germany • Japan • Mexico • United Kingdom • China

Copyright © 2009 Accuride International Inc. 3700-9532(1221)-MK138-N-0909